
Module C - Showerframe Installation - Group A

Please install the Rapid Showerframe as quickly as possible in the exact position indicated.
Reduce the markings on the wall to a minimum.
Follow the instructions of the workshop managers.
Before you assemble the upper part is mandatory to have fixed the lower part on the wall.
Measurement is orientated on the left wall 50mm on top from the ground floor.

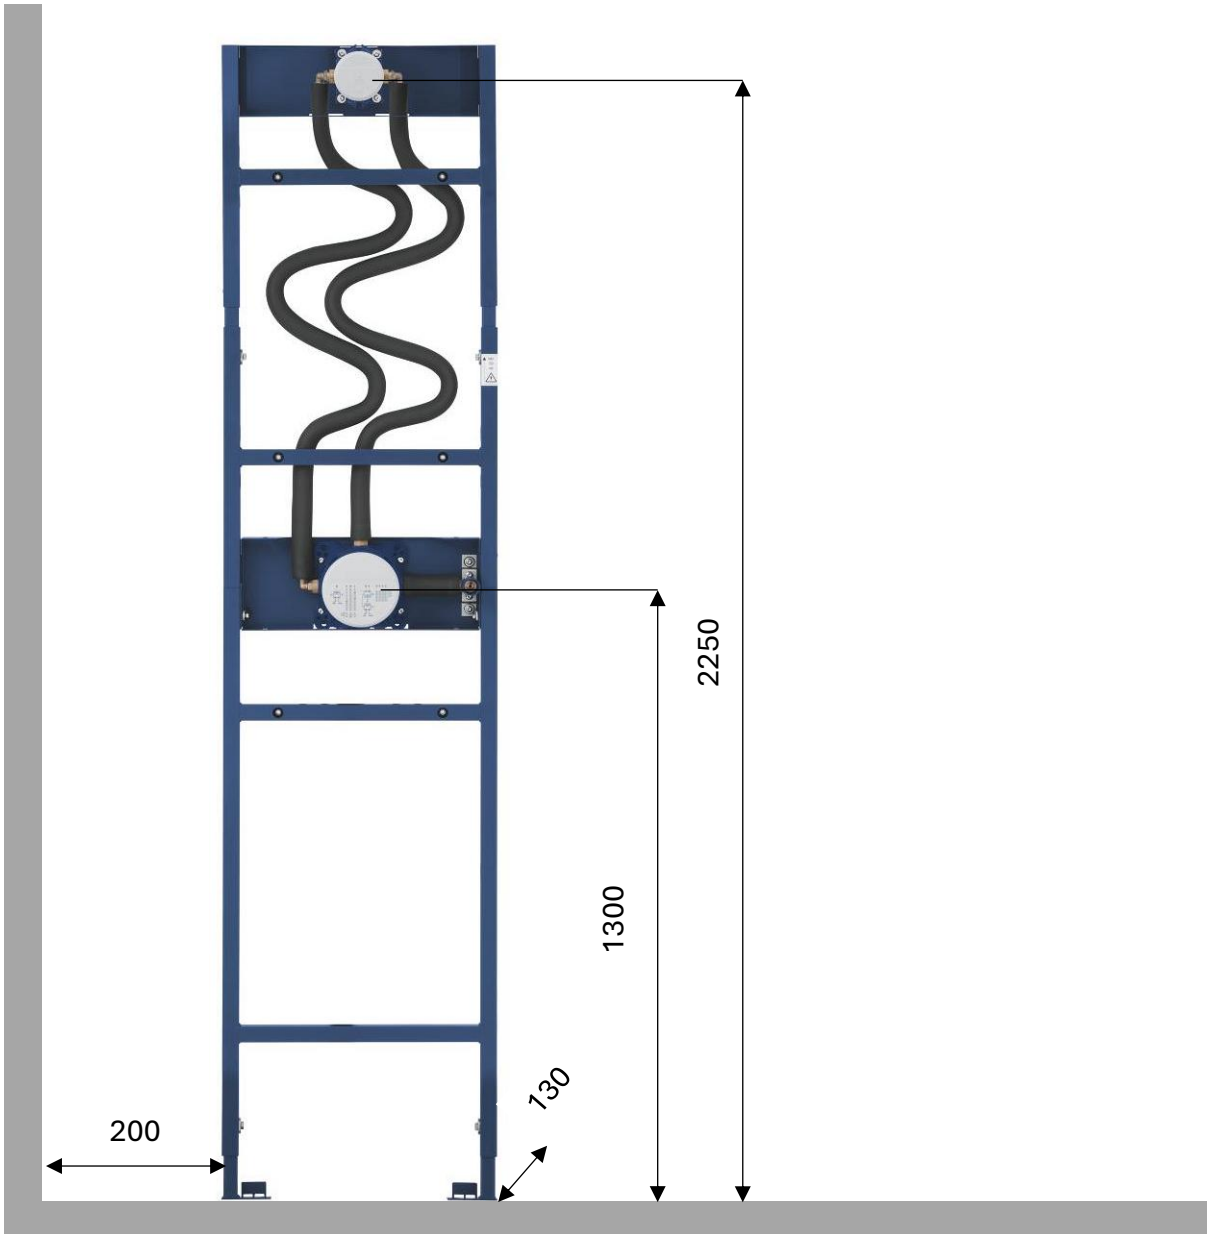

Module C - Showerframe Installation - Group B

Please install the Rapid Showerframe as quickly as possible in the exact position indicated.
Reduce the markings on the wall to a minimum.
Follow the instructions of the workshop managers.
Before you assemble the upper part is mandatory to have fixed the lower part on the wall.
Measurement is orientated on the left wall 50mm on top from the ground floor.

